

Section 2

Mid Unit

CONTENTS

Precautions	2-1	Diagnostic Information and Procedures	2B-16
Precautions.....	2-1	Diagnose PTT System Malfunction	2B-16
Precaution for Mid Unit	2-1	Service Instructions	2B-17
Housing and Bracket.....	2A-1	Checking PTT Fluid Level (One-Cylinder Type)	2B-17
Precautions.....	2A-1	Checking PTT Fluid Level (Three-Cylinder Type)	2B-17
Precaution for Housing and Bracket	2A-1	Air Bleeding from PTT Unit	2B-18
Service Instructions.....	2A-2	Setting of Trim Down Position Limit	2B-18
Lower Side Cover Components	2A-2	Setting Tilt Up Limit Position	2B-19
Lower Side Cover Removal and Installation	2A-3	Power Trim and Tilt Unit Removal and Installation (One-Cylinder Type)	2B-20
Engine Holder / Oil Pan / Driveshaft Housing / Mounts Components	2A-4	Power Trim and Tilt Unit Removal and Installation (Three-Cylinder Type)	2B-23
Engine Holder / Oil Pan / Driveshaft Housing / Mounts Disassembly	2A-6	Power Trim and Tilt Unit Components (One-Cylinder Type)	2B-27
Engine Holder / Oil Pan / Driveshaft Housing / Mounts Assembly	2A-8	Power Trim and Tilt Unit Components (Three-Cylinder Type)	2B-28
Engine Holder / Oil Pan / Driveshaft Housing / Mounts Related Component Inspection	2A-13	Power Trim and Tilt Unit Disassembly (One-Cylinder Type)	2B-29
Clutch Shaft Bearing and Oil Seal Replacement	2A-14	Power Trim and Tilt Unit Reassembly (One-Cylinder Type)	2B-30
Driven Gear Bearing and Oil Seal Replacement	2A-16	Power Trim and Tilt Unit Components Cleaning and Inspecting (One-Cylinder Type)	2B-32
Clamp / Swivel / Steering Bracket Components	2A-17	Power Trim and Tilt Motor Removal and Installation (One-Cylinder Type)	2B-33
Clamp / Swivel / Steering Brackets Disassembly	2A-19	Power Trim and Tilt Unit Disassembly (Three-Cylinder Type)	2B-34
Clamp / Swivel / Steering Brackets Assembly ..	2A-21	Power Trim and Tilt Unit Reassembly (Three-Cylinder Type)	2B-36
Clamp / Swivel / Steering Brackets Related Components Inspection	2A-24	Power Trim and Tilt Unit Components Cleaning and Inspecting (Three-Cylinder Type)	2B-39
Power Trim and Tilt	2B-1	Power Trim and Tilt Motor Removal and Installation (Three-Cylinder Type)	2B-41
Precautions.....	2B-1	Power Trim and Tilt Motor Disassembly and Assembly	2B-42
Precaution for Power Trim and Tilt	2B-1	PTT Motor Related Items Inspection	2B-43
General Description	2B-1	PTT Motor Relay Inspection	2B-44
Power Trim and Tilt Description	2B-1	PTT Switch Inspection	2B-45
Principles of Power Trim and Tilt Operation Description (One-Cylinder Type)	2B-4		
Principles of Power Trim and Tilt Operation Description (Three-Cylinder Type)	2B-9		
Schematic and Routing Diagram.....	2B-15		
Power Trim and Tilt System Diagram	2B-15		